



# SET-UP GUIDE

Unpacking a standard Archery Tag® bag with inflatable bunkers is very straightforward. Simply place the bag near your play area, unzip the bag and remove the contents.



To inflate the bunkers, start by removing the air valve cover. The internal valve should be in the up position so air flow is cut off unless the hose is inserted.



If the valve is in the down position, press on the valve with your finger, turn 1/4 counterclockwise and release so it moves to the up position.



Connect the hose on the inflate end of the inflator/deflator. Turn clockwise to secure the hose. The inflate (blower) end has the on/off switch.



Insert the hose in the bunker air valve and twist clockwise 1/4 turn so it locks in place.



Plug in the inflator. Turn on the inflator unit.



When inflated, remove the hose from the valve and replace the valve cap. Repeat for all bunkers.



A properly inflated bunker should rest on the ground and absorb arrow hits. If arrows ricochet, release air from the bunker valve.