





GlobalArchery.com



SafeArchery.com




TABLET MANUAL







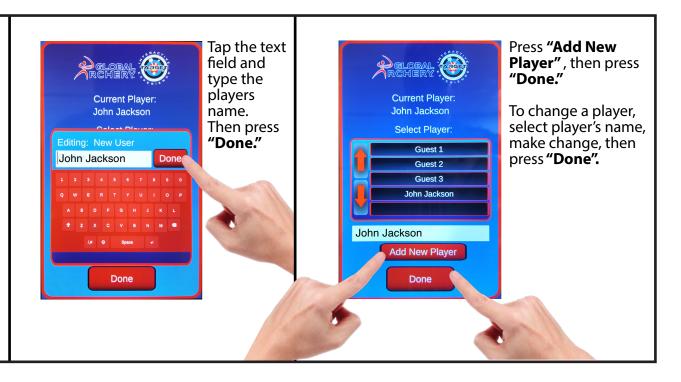





Here you can enable or disable games if you don't want all games appearing in the main menu. Simply select game in the dropdown and check "Enable" or uncheck to remove.

You can change the length of the games by moving the Time slider. (up to 240 sec. (4 min.)

Difficulty level coming soon.

To remove players, simply select the player's name and press "**Delete**".



If game targeting appears off check "Hit Mark" then select a game. Shoot at targets and a yellow Bullseye appears. If Bullseye is off from the impact site tap the "Calibrate" button.

To reset the game counter, select the game, then press "Reset".

To reset players score, select the player name, then press "Reset".

Be sure to press "**Done**" after making any changes.